8-Inch 2-Way Hatchback Speaker

Your RadioShack 8-Inch 2-Way Hatchback Speaker is specially designed to provide deep, clean sound inside or outside your car, pickup truck, or recreational vehicle. It is designed to be connected to your vehicle's stereo system. Its rugged, portable design lets you enjoy music on the road or at picnics and cookouts. With this versatile speaker, you can have music everywhere you drive your vehicle. You can also connect extended speaker wires so you can use the speaker outside the vehicle at outdoor events.

Your 8-Inch 2-Way Hatchback Speaker is designed for vehicle stereo systems of 5 watts or more per channel. For the best performance, we recommend you use a high-power amplifier (at least 50 watts) or an equalizer/booster with this speaker. Your local RadioShack store carries a wide selection of power amplifiers, equalizer/boosters and speaker wire.

Your speaker has these advanced features.

Portable Design — lets you use the speaker inside or outside your vehicle.

8-Inch Poly-Coated Woofers— provide smooth bass response with minimum distortion.

Piezo-Ceramic Tweeters— provide high quality treble response.

Caution: Do not let the speaker get wet.

INSTALLATION

Note: Speaker wires are usually color-coded or otherwise marked to indicate polarity. Be sure to connect the wire from both of the amplifier's + (positive) outputs to both of the speaker's + terminals, and both of the amplifier's – (negative) outputs to both of the speaker's – terminals If you reverse these connections, bass response is greatly reduced.

Follow these steps to connect your speaker to your amplifier or equalizer/booster.

1. Connect the amplifier to your stereo system as described in your amplifier and auto sound system's owner's manuals.
2. Cut the speaker cable to the necessary length and separate the wire conductors for about 4 inches on each end.
3. Strip about $^1/_2$ inch of insulation from the wire ends and twist the wire ends.
4. Connect the speaker wires to the amplifier's output terminals.
5. For each speaker wire, hold down one of the speaker's grooved **INPUT** terminal tabs and insert a speaker wire's bare end into the hole (connecting + to + and – to –). Then release the terminal tab.

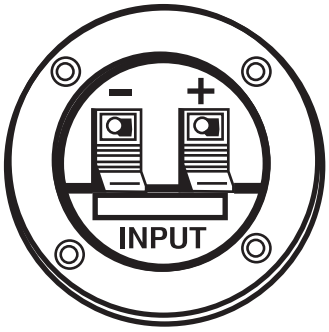

SPECIFICATIONS

Frequency Response	30-20,000 Hz
Maximum Power	375 Watts
Power Handling	125 Watts RMS
Impedance	4 Ohms
Speaker Elements	8-Inch Poly-Coated Woofers (2) $3^3/_4$ Piezo-Ceramic Tweeters (2)
Speaker Enclosure	Tuned Port Design
Dimensions (HWD)	$10^3/_{16} \times 30^3/_{16} \times 10^3/_{16}$ Inches ($26 \times 77 \times 26$ cm)
Shipping Weight	25 lbs (11.34 kg)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

© 2000 Tandy Corporation.
All Rights Reserved.
RadioShack is a registered trademark used by Tandy Corporation.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell *12/99*

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

01/00 Printed in the U.S.A.